Earlex®

STEAM DYNAMO PRO

Instant Steamer – Model IS2000
USER INSTRUCTIONS

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE

Thank you for purchasing an Earlex Instant Steam Cleaning Kit. In order to obtain the best results from this product, please read these instructions & make a special note of the Safety Rules before commencing any work.

EARLEX INC. WILL ACCEPT NO RESPONSIBILITY FOR THE USE OF THIS PRODUCT IF USED FOR ANY OTHER PURPOSES THAN THOSE DETAILED HEREIN

RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

HELPLINE NUMBER - TOLL FREE 888 STEAM 12

CONTENTS

Important Information

Check that your Steam Dynamo Pro is complete	3
Safety Rules	4
Safety Precautions	4
Steam Cleaning Delicate materials	4
About your Earlex Steam Dynamo Pro	5
Features Guide	7
Preparing your Steam Dynamo Pro for use	8
Using the main attachments	9
Using the mini attachments	11
Getting started	12
Cleaning & maintenance	13
Storing the unit	13
Trouble Shooting	14
Spare parts	14
Mains connection	15
Warranty	16

BEFORE PROCEEDING ANY FURTHER PLEASE CHECK THAT YOUR EARLEX STEAM DYNAMO PRO IS COMPLETE.

OPENING THE CARTON

When you open the carton, you will see the Caddy unit, which has the 4 main attachments stowed inside. The Caddy unit is on top of a plain brown carton. This carton contains 2 Extension Tubes and the Steam Unit, which has a recess in its underside where the three Mini Attachments are stored. The Hose and Handle and the Extension Cord are attached to the Steam Unit. Check the list below to ensure your Steam Dynamo Pro is complete.

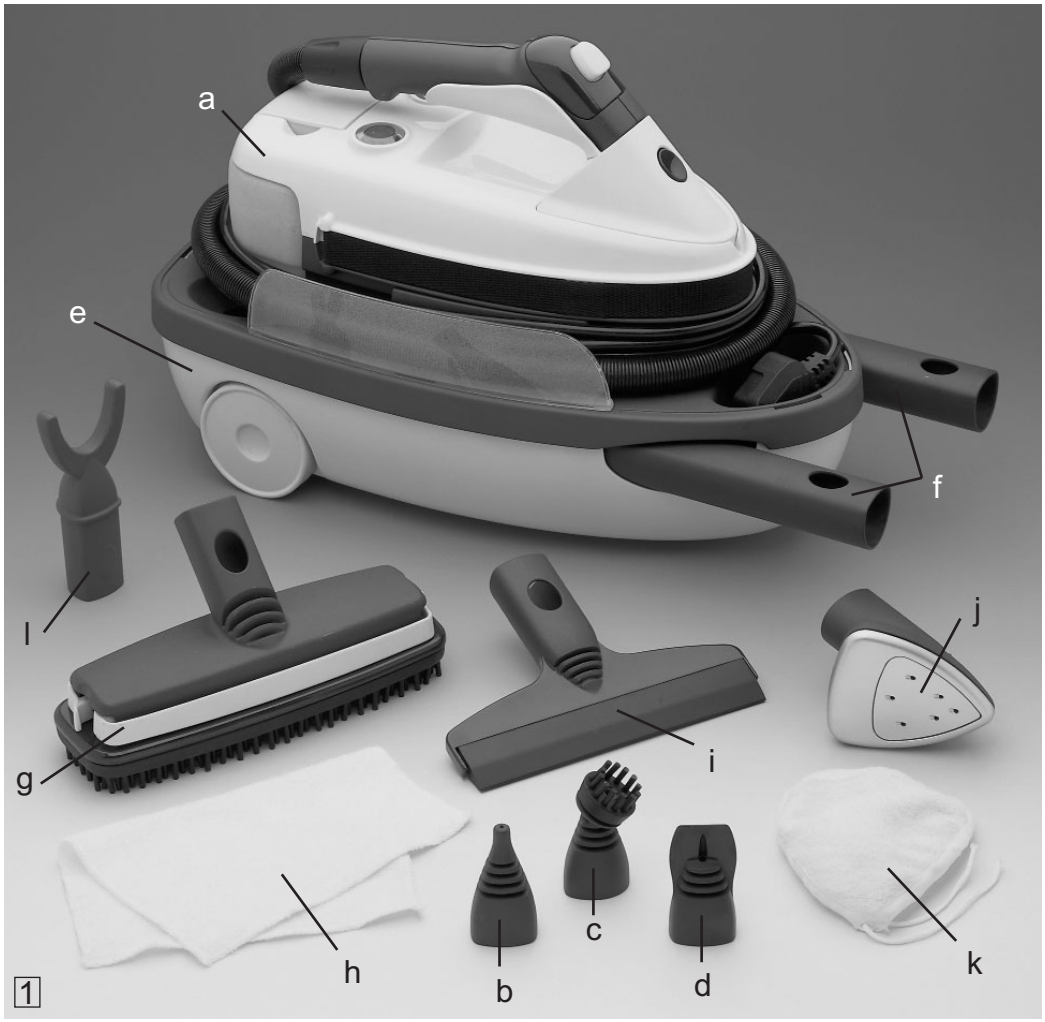

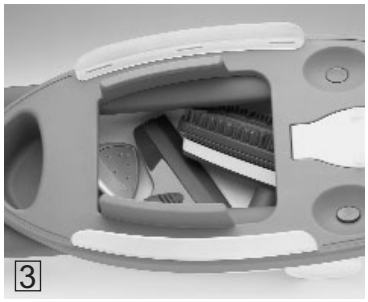

COMPONENT LIST

a) Steam Unit
b) Jet Nozzle *
c) Brush Nozzle *
d) Scraper Nozzle *
*These 3 tools are stored in a recess, in the underside of the steam unit as illustrated in 2
e) Caddy Unit
f) 2 x Extension Tubes
g) Floor Cleaner **
h) Floor Cleaner Bonnet **
i) Window/Tile Cleaner **
j) Upholstery Cleaner/Garment Steamer **
k) Upholstery Cleaner/Garment Steamer Bonnet **
l) Garment Attachment Rest **
**These 6 items are stored in the caddy as illustrated in 3
m) Instruction Manual (item not shown)
n) Quick Reference Guide (item not shown)

Should any of these components be missing please phone our helpline and we will arrange immediate despatch of replacements.

HELPLINE NUMBER - TOLL FREE 888 STEAM 12. CALL FIRST IF YOU HAVE ANY PROBLEM

SAFETY RULES

- Keep equipment away from children and pets.
- If using the unit on stairs or at a height, always ensure that it has been properly blocked to prevent it falling off.
- Steam is produced at 212˚ F. Be careful, wear protective clothing and protect your hands with heat resistant gloves or mitts.
- Never point the steam at anyone.
- Never use unit outside when raining.
- Do not overfill water tank.
- Do not stand on the unit or the hose.
- Do not pull the unit by the Power Cord, only by the Hose.
- Do not allow water or steam to enter light switches or power outlets.
- Do not leave unit unattended.
- Use only standard tap water. Never add detergents or chemicals for cleaning.
- Extreme care must be taken when using in bathrooms. Always be aware of the danger of electrocution from stored water in baths or basins.
- It is recommended that a G.F.I (Ground Fault Interrupter) rated at 30mA is fitted into the mains supply socket for added protection against electric shock.
- Use only genuine Earlex replacement parts, unless otherwise stated.
- Never direct steam towards equipment that contains electrical components.

CAUTION

STEAM IS HOT! Please be aware that steam is produced at 212˚ F – so be careful, wear protective clothing and protect your hands with heat resistant gloves or mitts. Be aware that during use, condensing steam will result in a small amount of hot water dripping from the attachments. Take extra care when cleaning with the attachments at higher levels, eg cleaning windows or tiles. When used for removing creases from garments or drapes avoid water marks from dripping water by wiping the attachments occasionally with a dry cloth. The exposed parts of the Steam Dynamo Pro that become hot in use, and which the user is likely to touch in use, are colored RED as an extra warning. Never touch these parts when the unit is in use. Any part of the Steam Dynamo Pro may be hotter than you expect, so always take extra care during or after use.

You will see this symbol above the Steam Release button on the handle, to warn you about the presence of steam.

Quality control checks in our factory may result in a very small residue of water in the steam hose of the Steam Dynamo Pro. This is due to steam cooling in the hose. When you switch the unit on for the first time (and every time thereafter) and before the Steam Ready light comes on, there may be a short jet of hot water or steam ejected from the end of the tool, before or immediately after the Steam Button is pressed. Drain this water into a container, until only steam is produced, before starting your cleaning task.
Only submerge the end of the handle nozzle when descaling. Never submerge at any other time, with or without attachments fitted. Cooling steam will draw water up into the hose.

USING STEAM ON DELICATE MATERIALS

Always check the suitability of materials before steam cleaning. Steam is being generated at 212˚ F. Do not use on any surfaces that cannot withstand this temperature e.g. Draylon®, velour, delicate fabrics etc. Always test a small area of the material – preferably a portion that is normally unseen – and allow it to dry before starting the full cleaning task.
Do not soak materials being cleaned. Only a light application of steam is required.

We do not recommend using this product on self adhesive vinyl tiles.

ABOUT YOUR EARLEX STEAM DYNAMO PRO

INTRODUCTION

Thank you for purchasing an Earlex Steam Dynamo Pro. It is a totally unique steam cleaning system unlike any other currently available. It enables the user to complete numerous cleaning and other tasks around the home, in the garden and in the car. We hope you will use the Earlex Steam Dynamo Pro often to save you time, enhance the look of your home and keep it spotlessly clean.

The really unique aspect of the Steam Dynamo Pro is that you get three products in one. A hand held steamer, a floor mounted steamer and an upholstery/garment steamer.

THE POWER & HYGIENE OF STEAM

The Steam Dynamo Pro will clean most surfaces and materials using only the power of steam. No chemicals, detergents or cleaning fluids are required. This not only helps to protect the environment but also saves the money normally spent on traditional cleaning products. The action of steam also removes any traces of powder or liquid cleaners previously used.

Using the heat and power of steam, the Earlex Steam Dynamo Pro is extremely effective in maintaining hygiene around your home. In the kitchen and bathroom, on carpets, and upholstery the action of steam can kill off many common bacteria. E-coli, Salmonella, Staphylococcus aureus and Pseudomonas aeruginosa are among the bacteria that the Steam Dynamo Pro can banish from all your living areas and give you peace of mind that your home is as clean as it can be.

WHERE TO USE YOUR STEAM CLEANER

The Earlex Steam Dynamo Pro can be used around your home to clean, brighten and restore the pile in your carpets. Even tiled, stone and sealed hard wood floors can be cleaned to make them look almost new. Clean and refresh the color of your soft furnishings and upholstery, and remove unwanted creases and wrinkles from your garments and drapes. The Steam Dynamo Pro has been cleverly designed to convert, very simply, to a garment steamer that gives very professional results. With the instant steam availability and fast assembly as a garment steamer this means you can use this product regularly to keep your clothes looking their best.

In the kitchen and bathroom the Earlex Steam Dynamo Pro will both clean and sanitize. Cleaning around faucets, toilets, all sanitary ware and tiles, will both improve the looks and ensure these areas are truly sanitized. Ceramic tiles will sparkle when soap scum is removed, mirrors too will look like new. Removing burnt and caked on deposits from stoves becomes an easy task.

HELPLINE NUMBER - TOLL FREE 888 STEAM 12. CALL FIRST IF YOU HAVE ANY PROBLEM

The Earlex Steam Dynamo Pro is an extremely useful tool. It will remove traffic film from windows, clean venetian blinds and defrost freezers (check with freezer manufacturer). Outside of the home the Earlex Steam Dynamo Pro can be used to clean the barbecue, the deck of your lawnmower, sterilize soil and clean the interior of your automobile.

THREE STEAM CLEANERS IN ONE

Choosing how to use your Steam Dynamo Pro

The Steam Dynamo Pro is unique in that it can be used in three distinctly different ways.

As a hand held cleaning tool with the Steam Unit carried over your shoulder. When cleaning around the bathroom, some kitchen areas and some windows, it is likely this will be the best way to use the Steam Dynamo Pro.

Or, with the Steam Unit fixed to the wheeled Caddy, free to be pulled behind you on the floor as you work. If cleaning flooring, for example, it will definitely be easier to use with the Caddy on the floor.

Or, as a garment steamer. The Steam Dynamo Pro quickly converts to allow you to steam and clean your clothes in a professional way.

As you experiment with different jobs you will soon discover which way is best for you.

GET TO KNOW YOUR STEAM CLEANER

The Steam Dynamo Pro is designed for fast action and is ready for use in less than a minute. It is supplied with a range of different tools for different jobs. Take a little time to get to know these tools and how they can best be used for your cleaning jobs.

Where towelling bonnets are supplied with some of the tools, dirt will be absorbed by the towelling material, which is washable and can be replaced as necessary. Packs of replacement bonnets are available from Earlex Inc or you can make your own from Terry Towelling.

FEATURES GUIDE

Refer to the following drawing & descriptions when reading this instruction leaflet.

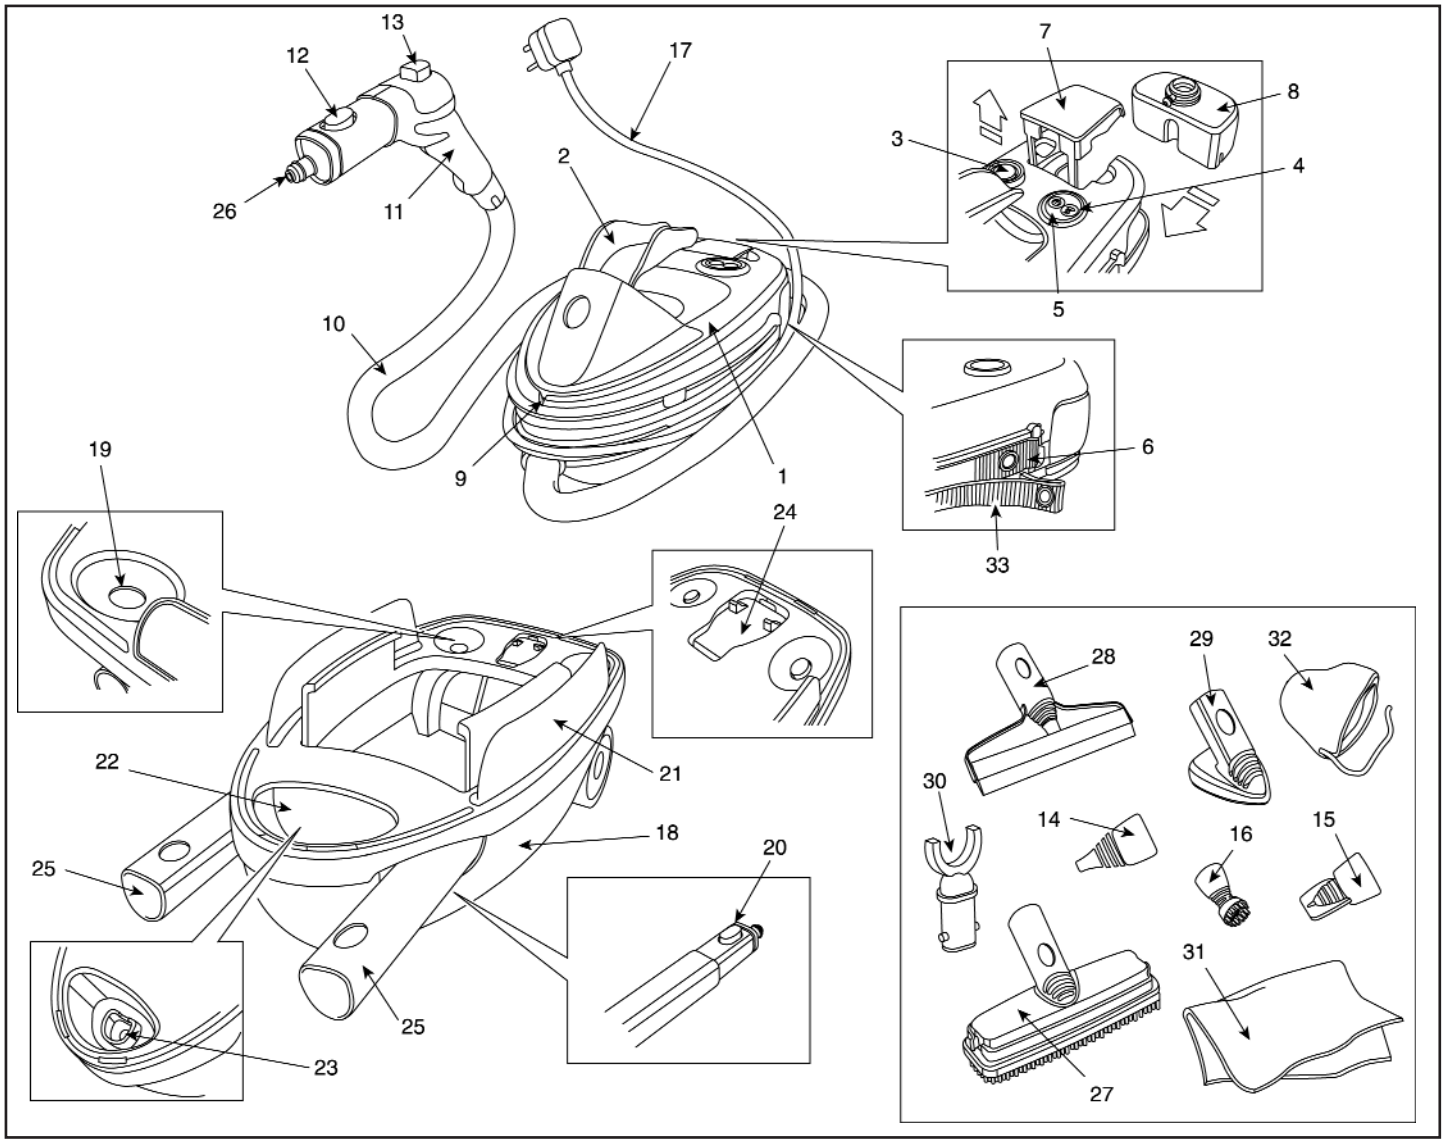

1 Steam Unit
2 Holster
3 On/Off Mains Switch
4 “Heating Up” Neon Indicator
5 “Steam Ready” Neon Indicator
6 Shoulder Strap Popper Release
7 Water Tank Lid
8 Water Tank
9 Drip Aperture
10 Steam Hose
11 Handle
12 Handle Release Button
13 Steam Release Button
14 Jet Nozzle
15 Scraper Nozzle
16 Brush Nozzle
17 Power Cord
18 Caddy
19 Location for Extension Tube Button
20 Extension Tube Release Button
21 Hose & Power Cord Retainer
22 Plug Storage Recess
23 Socket for location of Extension Tubes for Garment Attachment Rest
24 Steam Unit Release Latch
25 Extension Tubes
26 Attachment Connection
27 Floor Cleaner
28 Window/Tile Cleaner
29 Upholstery Cleaner/Garment Steamer
30 Garment Attachment Rest
31 Floor Cleaner Bonnet
32 Upholstery Cleaner/Garment Steamer Bonnet
33 Shoulder Strap

PREPARING YOUR STEAM DYNAMO PRO FOR USE

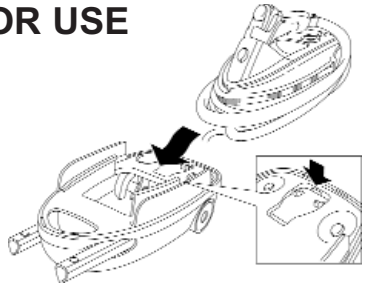

Fitting the Steam Unit (1) to the Caddy (18)
Slide the Steam Unit into the center of the Caddy until the yellow Steam Unit release latch (24) locks into place. To remove, press the Steam Unit release latch down and slide the Steam Unit backwards.

Storing the Handle (11), Hose (10) & Power Cord (17)
With the Steam Handle uncoiled in front of the unit take the Power Cord, and coil it tightly around the base of the Steam Unit above the steam hose outlet so that after 4½ turns the plug can be stored in the front recess (22). Then coil the hose 1½ turns until the Handle parks into its Holster (2). Press down the Handle Release Button (12) and push the Handle into the Holster so that the release button locks into its location. To remove, simply depress the release button and withdraw the Handle.

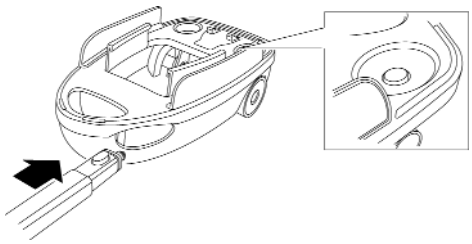

Storing and removing Extension Tubes (25)
Slide the Extension Tubes into the front of the Caddy, button end first and slide the tubes through the Caddy until the Release Button (20) aligns and fits into the location (19). To remove, simply depress the release button and withdraw the Extension Tube. Note: It will be easier to do this when the main attachments are not stored in the Caddy.

Using the Shoulder Strap (33)
The Strap is used for the hand held function to enable the user to carry the Steam Unit over the shoulder. To unfasten the strap, release the popper (6) and pull the strap out at the front end of the Steam Unit until it is fully extended. The Steam Unit can now be hung over your shoulder.

Fitting the Extension Tubes & Attachments
There are 3 Main Attachments (27, 28, 29), 3 Mini Attachments (14, 15, 16), 2 Extension Tubes and a Garment Attachment Rest to use with your Steam Dynamo Pro, depending on the job you want to do. All attachments are fitted either to the Extension Tubes or directly to the Handle, which ever is most suitable for the task in hand.

- The Main Attachments and the Extension Tubes fit over the release button.
- The Mini Attachments push tightly over just the front portion of the Handle or Extension Tube.

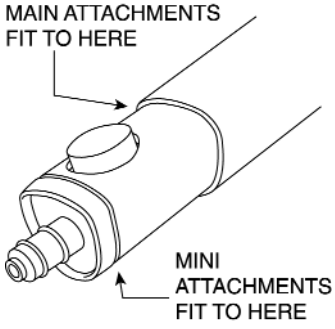

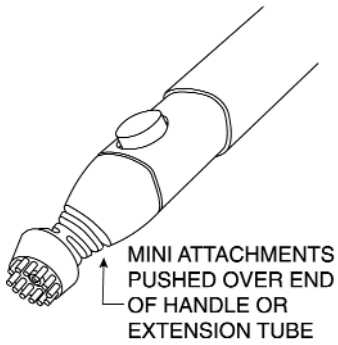

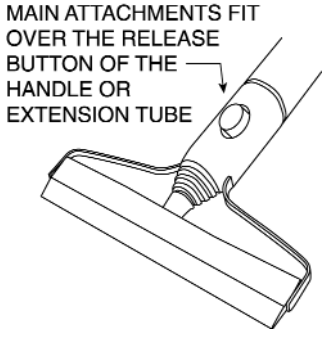

USING THE MAIN ATTACHMENTS

Floor Cleaner (27)

Some carpets have stain resistant treatments, which may be affected by steam cleaning. Try cleaning a small area of carpet that is normally unseen, then allow 24 hours to check whether there have been any unusual effects on the carpet, e.g white streaks. If this happens DO NOT CONTINUE TO USE – Check with your carpet supplier for further advice.

On wax treated surfaces and floors the sheen may be removed by steam. Do not use on unsealed wood as this could destroy the integrity of the wood grain. Always check a small area first or check with the manufacturer.

The Floor Cleaner can be used in a number of ways and for a variety of purposes. You may need to experiment to find the best method of cleaning. The three options of use are:

a) With bristles extended – no Bonnet being used
b) With bristles extended and a Bonnet (31) in use
c) No bristles extended and a Bonnet (31) in use

In general, option (a) is likely to be used on stone or tiled floors where there are areas needing more vigorous action to clean thoroughly. This may, for instance, be the grouting between tiles that requires the bristles to help clear out dirt or grime.

Option (b) would be the normal use for any stone, tiled or solid floor.

Option (c) is for normal carpeted areas.

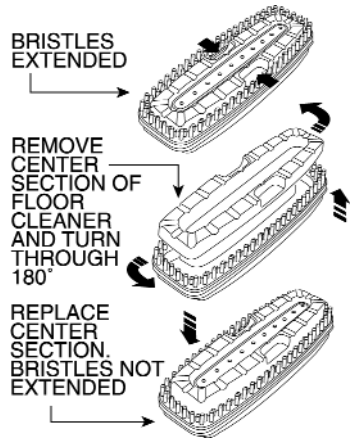
BRISTLES EXTENDED
REMOVE CENTER SECTION OF FLOOR CLEANER AND TURN THROUGH 180˚
REPLACE CENTER SECTION. BRISTLES NOT EXTENDED

The Earlex Steam Dynamo Pro Floor Cleaner can be changed from having its bristles extended to not extended. This is achieved by repositioning the center section of the Floor Cleaner. You will see in this center section there are 2 finger grip cut outs which enable you to remove the section completely. Once removed, rotate the section through 180˚ and re-locate it in the Floor Cleaner. You will see the position of the bristles has changed.

Fitting the Bonnet (31) to the Floor Cleaner (27)

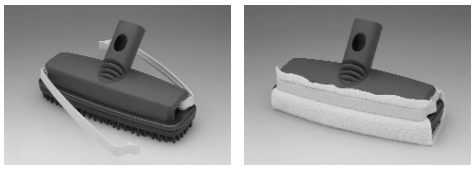

To fit the Bonnet, open the two yellow clips. Lay the Bonnet on a flat surface and place the Floor Cleaner in the center of the Bonnet. Fold the Bonnet around the Floor Cleaner with the nap facing outwards and secure it in position by re-fixing the clips in place, making sure the Bonnet is pulled tight over the face of the Floor Cleaner.

Used correctly the Floor Cleaner will refresh and brighten your floor by removing surface grime, pet hairs etc. It is not a dirt extraction system, so it cannot remove deep stains or grease. Before using the Floor Cleaner, use a vacuum to pick up the larger dirt and grit particles. If there are stains on the carpet, pause for a few seconds to allow the steam to penetrate but do not use excessive steam as this could result in watermarking or permanent staining.

IMPORTANT - When cleaning hard floors there may be a small residue of water that will ultimately evaporate. If preferred, use a *dry* cloth attached to the Floor Cleaner (steamer turned off) and wipe area dry.

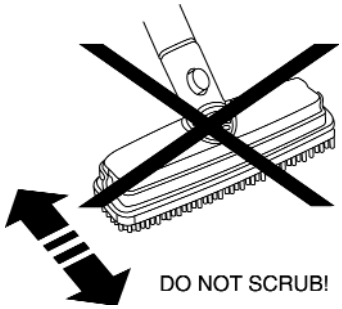

DO NOT SOAK THE SURFACE! - Glide the Floor Cleaner over the surface. It is generally better and easier, to pull rather than push the head across heavy pile carpets. Do not scrub the surface unless this is on tiles or stone. Used Bonnets can be washed out and re-used. Spare Bonnets are available from Earlex Inc or you can make your own using Terry Toweling material.

Uses for your Floor Cleaner

The Floor Cleaner can be used on many types of surfaces such as ceramic, marble, linoleum, stone, parquet etc. Be especially careful with parquet – older oak floors are very tough but on some newer floors steam may cause the blocks to swell. Always take advice from the manufacturer of the floor covering before proceeding to use steam. One useful point to note is that steam will cause animal hairs, that have collected on floors and fabrics to roll into easily removable balls.

This attachment can also be used on automobiles interiors, RV's, painted doors, walls, louvers etc.

IMPORTANT - When cleaning hard floors there may be a small residue of water that will ultimately evaporate. If preferred, use a dry cloth attached to the Floor Cleaner (steamer turned off) and wipe area dry.

We do not recommend using this product on self adhesive vinyl tiles.

Window/Tile Cleaner (28)

When cleaning exterior glass be careful not to pick up grit particles on the rubber blade as this could scratch the glass.

CAUTION - Antique glass and stained glass may be brittle and can crack under extreme temperatures. Do not use on glass when the temperature is below 32˚ F.

The Window/Tile Cleaner can be used fitted directly onto the Hose Handle or fitted to one or both Extension Tubes, whichever is best for the job in hand.

As the attachment is moved down the window (mirror or tiles) and the Steam Release Button is pressed, the rubber blade will clean away the dirt as it wipes the surface after the steam has been applied. After you have completely finished cleaning, release the Steam Button and clean the surface from top to bottom with the rubber blade only. Excess water from around the window sould be removed with a dry cloth.

Steam will completely remove dust, film or greasy marks from windows, mirrors, tiles and patio doors. It will remove soap and grease residues but cannot remove deposits of ***scale***. To remove black marks from ***grouting*** or difficult corners use the mini attachments, Jet Nozzle, Brush Nozzle or Scraper Nozzle.

Upholstery Cleaner*/Garment Steamer (29)*

IMPORTANT – Some upholstery, fabrics and soft furnishings have stain resistant treatments, which, may be affected by steam cleaning. Try cleaning a small area of material that is normally unseen, then allow 24 hours before checking whether there have been any unusual effects on the material. If so, DO NOT CONTINUE. Check with your material supplier for further advice. Do not allow the material to become soaked. You only require a small amount of steam to clean, and soaking can leave water marks or cause bleed through linings etc.

The Upholstery Cleaner can be used either with or without the Bonnet (32). For normal cleaning purposes and for general use the Bonnet would be fitted. When removing creases from garments and hanging drapes you can sometimes improve the appearance of the material by using the head without the Bonnet attached. It is best to experiment to get the best finish for you.

This tool can also be used either fitted directly onto the Hose Handle or fitted to one or both Extension Tubes. First select which is best for the task in hand and assemble together.

Fitting the Bonnet (32) to the Upholstery Cleaner (29)

Take the Bonnet, place it on a flat surface with the strings at the top and the ***nap*** facing outwards and place the Upholstery Cleaner in the middle. Pull the string until the Bonnet fits tightly to the Upholstery Cleaner, and tie with a bow.
When cleaning upholstery you will need to glide the head across the material in the same way as when using the Floor Cleaner. The bonnets will need to be replaced as they become dirty. Used bonnets can be washed and re-used. Wash at 194˚F for maximum longevity. Do not use bleach or fabric conditioner and use only one third of normal soap powder to avoid clogging the fibres.
Spare Bonnets can be purchased from Earlex Inc or you can make your own using Terry Toweling material.
The Upholstery Cleaner can also be used very effectively for removing the creases from hanging drapes.

---

*Upholstery Cleaner/**Garment Steamer***

To set up your Steam Dynamo Pro as a Garment Steamer proceed as follows:-
In the Plug Storage Recess (22) there is a socket (23) to accept the button end of the Extension Tubes. Fit the Extension Tubes together and then locate both into this socket. Now fit the Garment Attachment Rest (30) into the top of the Extension Tube. Your garment can now be hung from this Garment Attachment Rest using a normal coat hanger.
Press the Steam Release Button and pass the Garment Steamer lightly across the surface to remove creases and wrinkles from your garment.
We recommend that the unit remains on the floor and shorter garments are steam cleaned from a seated position as shown. Longer garments can be hung from a wardrobe rail or over the top of a door.
The Garment Attachment Rest is used to “park” the Garment Steamer safely in between steaming your garments. It can also be used to park the Window/Tile Cleaner

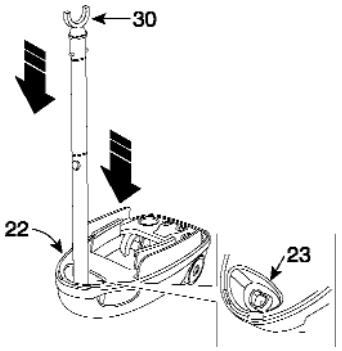

Please note, the Garment Steamer is designed to refresh garments (i.e. appearance & odour), it is not designed to be a replacement for your steam iron. If the yellow button on the handle is pressed continuously you may begin to see drips of water appear (this is due to the steam condensating in the tube), by using "bursts" of steam as opposed to "continuous" steam this will be reduced. If you should notice drips of water from the bonnet, you should stop steaming, and wait a few seconds before drying the Bonnet with a hand towel.

IMPORTANT – Some garments are made from very delicate materials. Always refer to the labels in the garment, or check with the shop where the garment was bought, before applying steam.

USING THE MINI ATTACHMENTS

The 3 Mini Attachments are stored in a recess underneath the Steam Unit for easy selection of the tool required. The 3 attachments supplied are:-

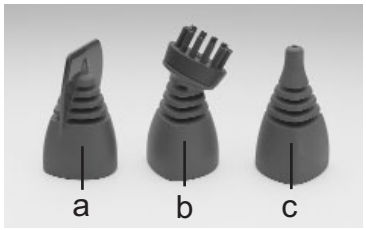

a) Scraper Nozzle (15)
b) Brush Nozzle (16)
c) Jet Nozzle (14)

WARNING: THESE MINI ATTACHMENTS RUN VERY HOT IN USE. When changing the Mini Attachments, always use a cloth when holding the attachment to prevent burning your hands. Check attachments on a regular basis for any debris/scale build up.

The Mini Attachments are ideal for cleaning stoves, baths, toilets, work surfaces, tiles, basins, barbecues etc. The brush can be used to agitate areas that need that little bit extra abrasion. We recommend that you use these attachments in conjunction with a damp cloth. As an example – if you have baked on material on a stove, aim the Jet Nozzle at the surface, press the Steam Button to release the steam and you should be able to easily wipe the surface clean. The damp cloth enables you to wipe away the waste material.

The Scraper Nozzle is ideal for very fast defrosting of freezers (check with freezer manufacturer), also for jobs such as removing the dried on grass from lawnmowers. Remember that steam both cleans and sanitizes at the same time. So on work surfaces you are ensuring these are really clean.

As an optional extra (Code M0605) we offer a pack of 3 spare brushes each with different coloured bristles so you can keep these for separate jobs and always know which one to use.
Also available as an optional extra (Code M0625) is a Brush Nozzle with wire bristles for cleaning barbeques.

GETTING STARTED

Before you use your Earlex Steam Dynamo Pro, make sure that you have read and followed all the safety instructions.
Decide how you want to use the Steam Dynamo Pro as a hand held unit with the Steam Unit hung over your shoulder, with the Steam Unit fixed to the Caddy free to be pulled along on the floor, or set up as a Garment Steamer. Refer to the section “Preparing your Steam Dynamo Pro for use” and fit together the various parts of the system to suit the job in hand.

Filling the Water Tank (8)

The Water Tank can be filled in two ways. Remove the Steam Handle from the Holster then either:

Lift the Water Tank Lid (7) and hold it out of the way, fill the Water Tank to the base of the filler neck (75cl) then replace the lid.
Or
Lift Water Tank Lid and pull the Water Tank out completely. Fill this from a faucet to the base of the filler neck then replace it into the Steam Unit and replace the lid.

Note In hard water areas we recommend you use cooled boiled water.
The water in the tank should last for about 30 minutes of cleaning time but this can be refilled at any time and does not require the unit to be switched off. Nor do you have to wait for it to heat up again. Simply refill either in situ or at the faucet and you can continue as before.

Switch the Steam Dynamo Pro on

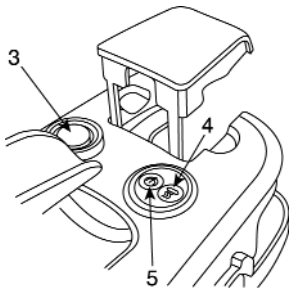

With the tank filled with water, plug the steamer into a mains socket and press the red ON/OFF Mains Switch (3) and this will illuminate to show the power is on. The amber “Heating Up” neon Indicator (4) will also light up.
After approximately 30 – 60 seconds the green “Steam Ready” neon Indicator (5) will light up to tell you that the unit is ready to use and instant steam is available.

Steam Release Button (13)

To deliver instant steam just press the Steam Release Button.
The Steam Release Button gives complete control over the delivery of steam. Once the water heats up and the “Steam Ready” neon is lit, steam will be delivered only when the Steam Release Button is depressed. This means that you produce the exact amount of steam you need, when you need it. Normally steam will be delivered within two or three seconds of the button being depressed and stop within a few seconds of the button being released, giving you complete control of the steamer.

The Steam Dynamo Pro has added safety because the Steam Button has no electric wires connected to it. Instead a pneumatic system is used to operate the delivery of the steam.
Once the Steam Dynamo Pro is ready to use, begin to move the attachment head over the surface to be cleaned at a steady pace, pressing the Steam Button as required.

WARNING: Quality control checks in our factory may result in a very small residue of water in the Steam Hose of the Steam Dynamo Pro. This is due to steam cooling in the hose. When you switch the unit on for the first time (and every time thereafter) and before the Steam Ready light comes on, there may be a short jet of hot water or steam ejected from the end of the tool, before or immediately after the Steam Button is pressed. Drain this water into a container, until only steam is produced, before starting your cleaning task.
Only submerge the end of the handle nozzle when descaling. Never submerge at any other time, with or without attachments fitted. Cooling steam will draw water up into the hose.

CLEANING AND MAINTENANCE

The Steam Unit must be ***unplugged*** after use and before cleaning or before any maintenance.
There is very little maintenance required for this machine. To clean after use, simply ensure the unit is switched off at the mains then wipe it over with a damp cloth. Wipe all tools down and wash out any used bonnets.

Periodically check Attachments, Extension Tubes, Nozzle Connection and Handle Nozzle Connection for a build up of debris or lime-scale and remove as necessary.
Wash Bonnets at 194˚F for maximum longevity. Do not use bleach or fabric conditioner. Use only one third of normal soap powder to avoid clogging of the fibres.
Spare bonnets are available from Earlex Inc or you can make your own using Terry type material.

DE-SCALING

The information below, only applies in hard water areas or where some lime scale is evident.

To keep your Earlex Steam Caddy “boiler” working at its best, you will need to use a de-scaling solution to reduce the effects of “lime scale” build up within the boiler. Proprietary de-scaling products can be used, however, they need to be clearly marked that they are suitable for Kettles, Coffee Makers, Steam Irons etc. We would also recommend that you use a liquid de-scaler to prevent any possible clogging up of the internal pipes.

Before de-scaling, move appliance to a well ventilated area.

When de-scaling, place the nozzle only (26) into a bucket containing around 40/50mm of clean warm water, this will prevent any fumes that may be given off by the de-scaler. A “popping” sound may be heard from the bucket, this is due to the hot steam mixing with the warm water. After de-scaling the unit, always run the unit with clean water to remove any lasting de-scaler residue from within the boiler and pipes.

For maximum efficiency of the boiler this process should be repeated every 8 hours of use.

WHEN USING ANY DE-SCALER PRODUCT ALWAYS ABIDE BY THE MANUFACTURES INSTRUCTIONS.

STORING THE UNIT

Caddy

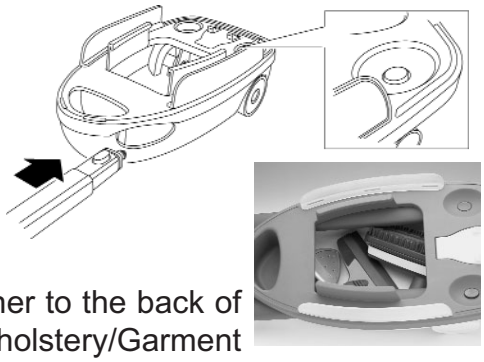

You will find it easiest to locate the Extension Tubes first, followed by the 4 Main Attachments.
a) Slide the tubes into their apertures at the front of the Caddy. Insert the button end first and slide the tubes through the Caddy until the Release Button aligns and locates into it’s docking aperture.
b) Now place the 4 Main Attachments into the space between the 2 Extension Tubes. You will find it easiest to place the Floor Cleaner to the back of the Caddy with the Window/Tile Cleaner in the middle and the Upholstery/Garment Steamer at the front. The Garment Attachment Rest should be laid on top of the other 3 attachments. (Garment Attachment Rest not shown in illustration for clarity.)

Steam Unit

a) Ensure that the Strap is fully retracted and clipped back into position.
b) Ensure the Water Tank is emptied.
With the Water Tank removed, press the Steam Release Button to run the unit. As soon as you hear a loud buzzing sound from the Steam Unit, release the Steam Release Button. This will purge the Steam Unit of water and reduce the risk of limescale build up.
c) Slide the Steam Unit into the center of the Caddy until the yellow Steam Unit Release Latch, locks into place.

d) Take the Power Cord, and coil it tightly around the base of the Steam Unit so that after 4½ turns the plug can be stored in the front recess. Then coil the hose 1½ turns until the Handle parks into it’s Holster. Press down the Handle Release Button and push the Handle into the Holster so that the release button locks into its docking aperture.
The unit can now be carried either by the Holster or by the Plug Storage Recess. The unit can be stored on the flat or be leaned against a wall.

TROUBLE SHOOTING

PROBLEM	CAUSE	ACTION
Unit fails to boil	Not switched on	Check that the mains is switched on and the ON/OFF switch on the unit has also been operated - Push button will illuminate.
	Fuse has blown	Check fuse in any Extension Cable that is in use.
Accessories fall off	Not properly fitted	Review fitting instructions.See page 8.
Water spitting out	Too much water in tank	Reduce the water level.
	Initial ejection at warm up	Press steam release button for initial discharge until steam is produced. See page 13.
	Not heated up	Wait for Steam Ready neon Indicator to light.
Loud buzzing noise from inside the Steam Unit	No water in the tank	Refill the Water Tank.
Steam being emitted from emergency vent at the back of the Water Tank	Pressure relief valve is operating due to blockage of steam	Switch off the unit. Allow the unit to cool for at least 5 minutes. Check all steam holes in the Attachment, and the Nozzle Connections in the Handle and Extension Tubes being used, to ensure there is no debris or lime-scale preventing steam from passing through them and clean out accordingly. The build up of lime-scale can be avoided by always using cooled, boiled water when filling the Water Tank.

SPARE PARTS & ACCESSORIES

The following spare parts are available from Earlex Inc. Please contact our helpline TOLL FREE 800 252 1288 to place your order.

SPARE PART NO.	SPARE PART DESCRIPTION	REF NO ON P. 7
M0001	Floor Cleaner	27
M0050	Upholstery Cleaner/Garment Steamer	29
M0075	Garment Attachment Rest	30
M0090	Window/Tile Cleaner	28
M0110	Extension Tubes	25
M0290	Jet Nozzle	14
M0295	Scraper Nozzle	15
M0310	Water Tank Lid	7
M0530	Water Tank	8
M0580	Brush Nozzle	16
M0605	Brush Nozzle kit, different colours (3 pieces)	N/A
M0610	Upholstery Cleaner/Garment Steamer Bonnet (3 pieces)	32
M0611	Floor Cleaner Bonnet (3 pieces)	31
M0615	“O” Ring set for Water Tank	N/A
M0616	“O” Ring set for Nozzle Connection (6 pieces)	N/A
M0625	Brush Nozzle with wire bristles (2 pieces)	N/A

HELPLINE NUMBER - TOLL FREE 888 STEAM 12. CALL FIRST IF YOU HAVE ANY PROBLEM

IF YOU REQUIRE FURTHER ASSISTANCE PLEASE CONTACT OUR HELPLINE ON
Toll Free: 888-STEAM12 Fax: 704 827 7849
Opening Hours: Monday – Friday 09:00 – 17:00 EST (Except Public Holidays)
www.earlex.com

POWER CONNECTION

- Power cord must be connected to grounded (3 prong) outlet.
- Replace a worn or damaged power cord. Never repair a power cord.
- Removal of grounding pin VOIDS warranty.

Extension Cord

If you are using an extension cord it must be rated at a minimum of 15 amps and fully unwound. Do not operate with a extension cord rated at less than 15 amps as this will cause premature failure of the element which is not covered by the warranty.

WARRANTY

This product is guaranteed for a period of 12 months against faulty materials and workmanship. While every possible care is taken by Earlex to ensure that our products leave the factory in good working order, Earlex cannot under any circumstances accept liability for problems or damage caused by their subsequent use. It is the responsibility of the user to ensure the surfaces to be treated or cleaned are suitable for steam. This guarantee does not affect your statutory rights. This guarantee excludes the use for rental. In the event of a fault occurring please contact our helpline before returning the unit to our Service Department at the address below together with a copy of your purchase receipt. All repairs will be dealt with speedily.
Some States do not allow limitations on how long an implied warranty lasts and some States do not allow the exclusion or limitation of incidental or consequential damages, so part or all of the above limitations or exclusions may not apply to you.
This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

British Registered Design: No. 3014006
European Community Registered Design No. 000115365
Australian Registered Design No. 155594
Chinese Registered Design No. 200430001190.6
International Patent No. GB2004/02177
Canadian Registered Design No. 105550
US Registered Design No. - 29/196.773
Japanese Registered Design No. 2004-2805

Earlex Inc, 8261 Hyw 73, Suite F, Stanley, N.C. 28164, USA
Tel: 704 827 7889 Fax: 704 827 7849
Customer Service: Toll Free 888-STEAM12
Spare Parts & Consumables: Toll Free 800 252 1288
Website: www.earlex.com

© 2004 Earlex Inc

M0499 07/04